

VEST EXTENDER MANUAL


Manual v1.0 - May 2023

Laevo Exoskeletons, Patrijsweg 30, 2289EX, Rijswijk, The Netherlands
www.laevo-exoskeletons.com - info@laevo.nl - +31 15 302 0025


fold open

Use: The Vest Extenders can be used to extend the chest circumference of a standard Laevo FLEX Vest in case it is too small.


laevo FLEX

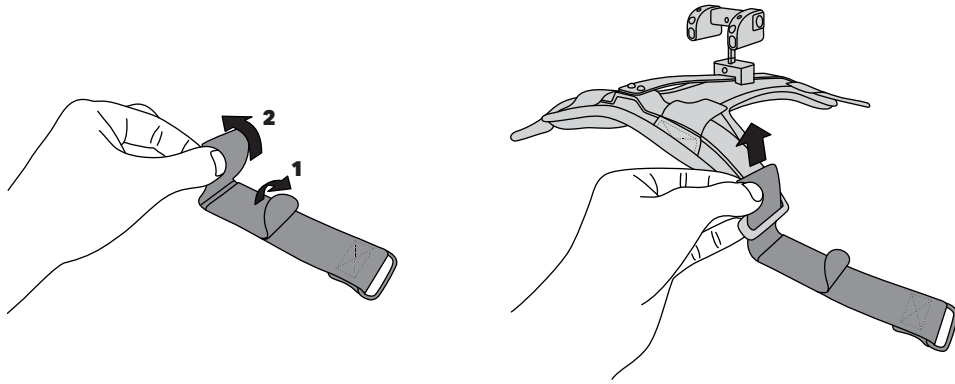


- 1.** Open the Velcro Tabs on the Vest Extender. Note you have to release the Small Safety Tab (1) first, before being able to open the Large Tab (2).

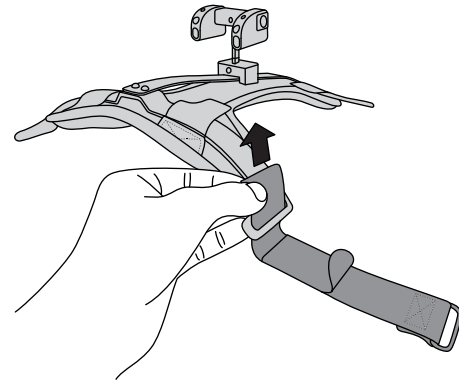


- 2.** Remove the existing Vest from the Lower Bar of the Vest Frame. Pull the Large Tab through the slot in the Lower Bar of the Vest Frame as shown above.

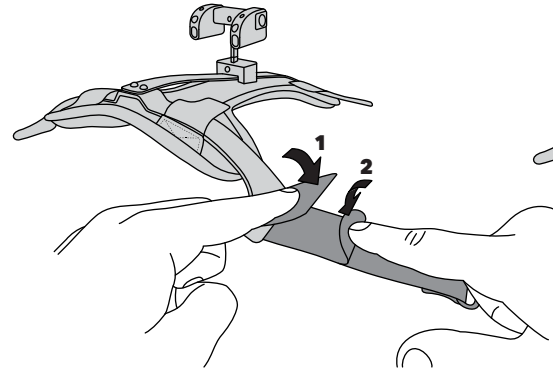


- 3.** Close the Large Velcro Tab (1). Next, secure it with the Small Safety Tab (2).

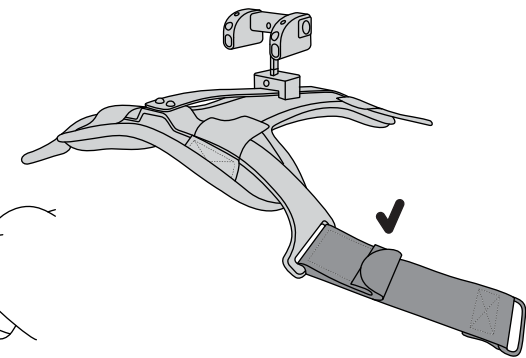


- 4.** The first Vest Extender is mounted onto the Vest Frame. The result should look as shown above.

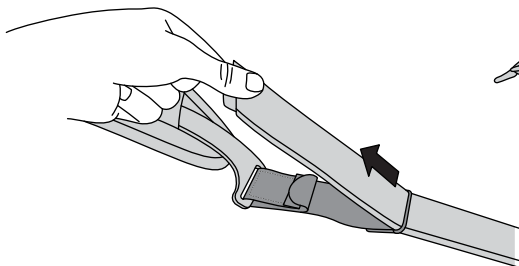


- 5.** Pull the Bottom Strap of the Vest through the metal loop of the Vest Extender.

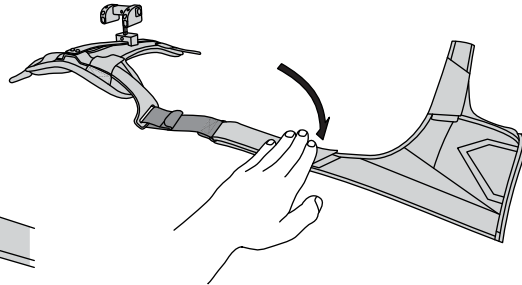

- 6.** Fold the Bottom Strap of the Vest back onto the Velcro on the Vest so it is ready to don.

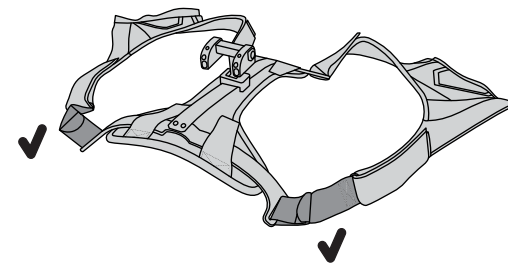

- 7.** If needed, (re)attach the Top Straps of the Vest to the Top Bar of the Vest Frame. Repeat the process so Vest Extenders are installed on both sides.

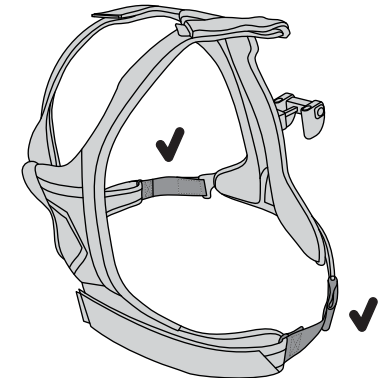

- 8.** Done! You can now work comfortably in your Laevo FLEX. If something still feels uncomfortable, do not hesitate to contact us!